

Thanks you for choosing one of DUEL FUEL car rentals, LP Gas power vehicle. Most of our fleet runs state of the art Auto LP Gas Sequential Vapour Injection. Install by industry accredited conversion specialist, the Gashop, using finest quality component accordance to AS 1425.

Our LP Gas vehicle will cut your fuel cost by half compare with petrol, while produce lower emission. We are confident, you will enjoy you journey with our DUEL FUEL vehicle for the first time and every time.

Emergency Procedures

LP Gas is artificially odourised for easy "leak detection". In the event of a suspected gas leak, accident, fire, or other major concern with the Duel Fuel System fitted. First, turn off engine ignition, then open the boot, open gas tank pad box, turn off manual service valve.

Refuelling

Petrol fill up is normal as specified in the vehicle Owner's Manual, some vehicle model may require the removal of interfering LP gas filling cup. Auto Gas Refuelling require the engine be turn off. Locate and open filling compartment, both petrol and Lp Gas filler are usually together. Remove Gas filling cup by unscrew anti clock wise. Adjust AUTO Gas Filling dispenser nozzle in line with Vehicle gas filler, Screw in clock wise until tie. Ensure the threads are not crossed. Squeeze nozzle trigger till stop, (Automatic stop at 80% of gas tanks full volume for liquid expansion.) Unscrew the filler nozzle and replace it on the bowser, and replace gas filler cap.

Petrol tank should be kept at least $\frac{1}{4}$ full. If run out totally, vehicle will not start on LP Gas!

Carefully observe and follow the filling instruction and warnings at filling stations

Fuel Selection

Turn of ignition, ensure gas light flashing, then turn engine to start, vehicle will automatically start on petrol, then turn to LP Gas once certain conditions are meet, such as water temperature, gas pressure, and engine RPM. Changing fuel selection can be made either with engine running off.

When engine running hold engine RPM AT 2,000RPM, then press the soft fuel switch once. When engine off, turn on ignition, then press soft switch once.

When starting a E.F.I vehicle DO NOT DEPRESS THE ACCELERATOR.

LP Gas indicator is on top of the LP Gas switch with 5 stage LED light. Four green shows full, the last red light is only a warning, not empty, and vehicle requires refilling soon.

If you have any question regarding the operation of Duel Fuel Car Rentals vehicles, please contact us on 1300 xxxx.